



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
10-0119-1	LIGHT, EMERGENCY EXIT	GRIMES	33
10-0119-3	LIGHT, EMERGENCY EXIT	GRIMES	33
1011104-2	ACCUMULATOR, HYDRAULIC	HONEYWELL	29
102568-3-1	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-3-2	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-5-1	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-5-2	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-6-1	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-6-2	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-7-1	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
102568-7-2	CONTROLLER, CABIN PRESSURE	HONEYWELL	21
103154-1-1	VALVE, SAFETY	HONEYWELL	21
1040T100-5	ACTUATOR, ROTARY	TALLEY	27
123562-2-1	VALVE, CHECK, PNEUMATIC	HONEYWELL	36
123562-4-1	VALVE, CHECK, PNEUMATIC	HONEYWELL	36
123563-2	VALVE, CHECK, PNEUMATIC	HONEYWELL	36
123563-4	VALVE, CHECK, PNEUMATIC	HONEYWELL	36
129112-1-1	ANTICIPATOR, PNEUMATIC	HONEYWELL	30
147465	VALVE, SHUTOFF	WHITTAKER CONTROLS	29
147465-1	VALVE, SHUTOFF	WHITTAKER CONTROLS	29
229165	VALVE	WHITTAKER CONTROLS	75
25130-1	FAN, VANEAXIAL	HAM-STD	21
2CM9AAC6	GENERATOR, TACHOMETER	AMETEK	77
2CM9ABH7	GENERATOR, TACHOMETER	AMETEK	77
2CM9ABY7	GENERATOR, TACHOMETER	AMETEK	77
3059103	ACCUMULATOR, HYDRAULIC	MOOG	29
3059103-1	ACCUMULATOR, HYDRAULIC	MOOG	29
3059103-2	ACCUMULATOR, HYDRAULIC	MOOG	29
320115	VALVE, ENGINE ANTI-ICE	WHITTAKER CONTROLS	75
3311586	ACCUMULATOR, SPHERICAL	MOOG	29
3311586-1	ACCUMULATOR, SPHERICAL	MOOG	29



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
3605812-10-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-14-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-17	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-18	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-18-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-2	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-2-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-21	STARTER, APU, ELECTRICAL	HONEYWELL	49
3605812-22	STARTER, APU, ELECTRICAL	HONEYWELL	49
372697-18-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
372697-21-1	STARTER, APU, ELECTRICAL	HONEYWELL	49
372697-9	STARTER, APU, ELECTRICAL	HONEYWELL	49
375322-10	STARTER, APU, ELECTRICAL	HONEYWELL	49
375322-7	STARTER, APU, ELECTRICAL	HONEYWELL	49
375322-8	STARTER, APU, ELECTRICAL	HONEYWELL	49
375322-9	STARTER, APU, ELECTRICAL	HONEYWELL	49
383152	STARTER, AIR TURBINE	HONEYWELL	80
383152-16-1	STARTER, AIR TURBINE	HONEYWELL	80
383152-19-1	STARTER, AIR TURBINE	HONEYWELL	80
383152-5-1	STARTER, AIR TURBINE	HONEYWELL	80
383152-7-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-1-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-2-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-3-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-4-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-5-1	STARTER, AIR TURBINE	HONEYWELL	80
383780-6-1	STARTER, AIR TURBINE	HONEYWELL	80
3912964-5001	ACTUATOR	* BOEING - DOUGLAS	27
3912964-5501	ACTUATOR	* BOEING - DOUGLAS	27
3913658-5501	ACTUATOR, MLG	* BOEING - DOUGLAS	32
3913658-5503	ACTUATOR, MLG	* BOEING - DOUGLAS	32



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
3913760-505	STRUT, MLG	* BOEING - DOUGLAS	32
3914625-5001	CYLINDER, STEERING	* BOEING - DOUGLAS	32
3914625-5501	CYLINDER, STEERING	* BOEING - DOUGLAS	32
3914738-5001	CYLINDER, BUNGEE, NLG	* BOEING - DOUGLAS	32
3915180-5001	SWIVEL	* BOEING - DOUGLAS	32
3915180-5501	SWIVEL	* BOEING - DOUGLAS	32
3915180-5503	SWIVEL	* BOEING - DOUGLAS	32
3915878-5001	MANIFOLD, BRAKE	* BOEING - DOUGLAS	32
3915878-5501	MANIFOLD, BRAKE	* BOEING - DOUGLAS	32
3915878-5503	MANIFOLD, BRAKE	* BOEING - DOUGLAS	32
3917382-5001	CYLINDER, STAIR	* BOEING - DOUGLAS	52
3917778-5503	VALVE, FLAP CONTROL	* BOEING - DOUGLAS	27
3918165-5001	VALVE, ELEVATOR	* BOEING - DOUGLAS	27
3918165-5501	VALVE, ELEVATOR	* BOEING - DOUGLAS	27
3919119-5001	CYLINDER, THRUST REVERSER	* BOEING - DOUGLAS	78
3919119-5001A	CYLINDER, THRUST REVERSER	* BOEING - DOUGLAS	78
3920048-5503	ACTUATOR, HYDRAULIC	* BOEING - DOUGLAS	27
3920048-5505	ACTUATOR, HYDRAULIC	* BOEING - DOUGLAS	27
3920048-5507	ACTUATOR, HYDRAULIC	* BOEING - DOUGLAS	27
3920048-5509	ACTUATOR, HYDRAULIC	* BOEING - DOUGLAS	27
3920048-5511	ACTUATOR, HYDRAULIC	* BOEING - DOUGLAS	27
3920802-5001	CYLINDER, MLG ASSY.	* BOEING - DOUGLAS	32
3920802-5501	CYLINDER, MLG ASSY.	* BOEING - DOUGLAS	32
3920802-5503	CYLINDER, MLG ASSY.	* BOEING - DOUGLAS	32
3920802-5505	CYLINDER, MLG ASSY.	* BOEING - DOUGLAS	32
3920802-5507	CYLINDER, MLG ASSY.	* BOEING - DOUGLAS	32
3923587-5001	SWIVEL, MLG	* BOEING - DOUGLAS	32
3925397-5000	LIMITER, RUDDER	* BOEING - DOUGLAS	27
3925397-5001	LIMITER, RUDDER	* BOEING - DOUGLAS	27
3928137-5001	CYLINDER, NLG RETRACT	* BOEING - DOUGLAS	32
3934689-5001	CYLINDER, STEERING	* BOEING - DOUGLAS	32



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
3937033-5001	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937033-5501	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937033-5503	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937860-5001	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937860-5002	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937860-5501	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3937860-5502	CYLINDER, BUNGEE, MLG	* BOEING - DOUGLAS	32
3952531-5001	CYLINDER, TRANSFER	* BOEING - DOUGLAS	29
3952531-5001NC1	CYLINDER, TRANSFER	* BOEING - DOUGLAS	29
40-0070-2	LIGHT	GRIMES	33
40-0070-4	LIGHT	GRIMES	33
40-0074-11	LIGHT, NAVIGATION	GRIMES	33
40-0074-13	LIGHT, NAVIGATION	GRIMES	33
40-0074-15	LIGHT, NAVIGATION	GRIMES	33
40-0074-17	LIGHT, NAVIGATION	GRIMES	33
40-0074-19	LIGHT, NAVIGATION	GRIMES	33
40-625-2	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
40-625-4	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
40-625-4A	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
40-625-5	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
40-625-6	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
40-625-75	TRANSDUCER, WHEEL SPEED	CRANE/HYDRO-AIRE	32
4372-501	GEARBOX, HORIZ. STABILIZER	SCHRILLO	27
4372-505	GEARBOX, HORIZ. STABILIZER	SCHRILLO	27
4372-507	GEARBOX, HORIZ. STABILIZER	SCHRILLO	27
45-0057-1	LIGHT, LANDING	GRIMES	33
45-0057-3	LIGHT, LANDING	GRIMES	33
45D16	SWITCH, PRESSURE	CUSTOM CONTROL SENSOR	21
45D16-1	SWITCH, PRESSURE	CUSTOM CONTROL SENSOR	21
4913774-5501	SWIVEL	* BOEING - DOUGLAS	32
4913774-5503	SWIVEL	* BOEING - DOUGLAS	32



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
4914491-1	PIN	* BOEING - DOUGLAS	32
4938930-1	SENSOR, LINK ASSEMBLY	* BOEING - DOUGLAS	27
4951078-501	BUNGEE, SPOILER	* BOEING - DOUGLAS	27
4951078-503	BUNGEE, SPOILER	* BOEING - DOUGLAS	27
4951078-505	BUNGEE, SPOILER	* BOEING - DOUGLAS	27
4957164-505	BUNGEE, ELEVATOR	* BOEING - DOUGLAS	27
4957164-507	BUNGEE, ELEVATOR	* BOEING - DOUGLAS	27
500702-5211	FAN, VANEAXIAL	HAM-STD	21
5765017-501	DAMPER, RUDDER	* BOEING - DOUGLAS	27
5765017-503	DAMPER, RUDDER	* BOEING - DOUGLAS	27
5910090	VALVE	* BOEING - DOUGLAS	21
5910090-265	VALVE	* BOEING - DOUGLAS	21
5910090-283	VALVE	* BOEING - DOUGLAS	21
5910090-285	VALVE	* BOEING - DOUGLAS	21
5910090-287	VALVE	* BOEING - DOUGLAS	21
5910090-303	VALVE	* BOEING - DOUGLAS	21
5910090-337	VALVE	* BOEING - DOUGLAS	21
5910090-363	VALVE	* BOEING - DOUGLAS	21
5910090-5	VALVE	* BOEING - DOUGLAS	21
5910090-641	VALVE	* BOEING - DOUGLAS	21
5910090-649	VALVE	* BOEING - DOUGLAS	21
5910090-683	VALVE	* BOEING - DOUGLAS	21
5910090-685	VALVE	* BOEING - DOUGLAS	21
5910090-7	VALVE	* BOEING - DOUGLAS	21
5910962-1	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-31	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-5	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-501	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-503	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-505	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-507	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
5910962-509	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-511	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-513	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-515	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-517	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-519	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-521	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-525	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
5910962-61	ACTUATOR, HORIZONTAL STABILIZER	* BOEING - DOUGLAS	27
59114066-5505	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5912287-1	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-501	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-503	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-505	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-506	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-507	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-509	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-511	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-512	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-513	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-515	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-517	VALVE, CHECK	* BOEING - DOUGLAS	21
5912287-519	VALVE, CHECK	* BOEING - DOUGLAS	21
5912802-501	RUDDER, LOWER HINGE TORQUE	* BOEING - DOUGLAS	27
5912802-503	RUDDER, LOWER HINGE TORQUE	* BOEING - DOUGLAS	27
5912802-505	RUDDER, LOWER HINGE TORQUE	* BOEING - DOUGLAS	27
5912802-507	RUDDER, LOWER HINGE TORQUE	* BOEING - DOUGLAS	27
5913900-5505	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5507	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5509	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5511	ACTUATOR	* BOEING - DOUGLAS	27



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
tel: (414) 355-7770; fax: (414) 355-2648  
repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
5913900-5513	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5515	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5517	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5519	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5521	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5523	ACTUATOR	* BOEING - DOUGLAS	27
5913900-5525	ACTUATOR	* BOEING - DOUGLAS	27
5914066-5011	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5015	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5501	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5505	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5507	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5509	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5511	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5513	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5515	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5517	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5519	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5521	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5523	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5525	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5527	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5529	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5531	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5533	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5535	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5537	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5539	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5541	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5543	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5547	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
5914066-5549	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5551	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5553	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5555	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5557	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5559	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5561	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5563	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5565	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5567	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5569	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5571	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5573	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5575	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5577	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914066-5581	ACTUATOR, RUDDER	* BOEING - DOUGLAS	27
5914190-5001	VALVE, RUDDER	* BOEING - DOUGLAS	27
5914190-5501	VALVE, RUDDER	* BOEING - DOUGLAS	27
5914190-5503	VALVE, RUDDER	* BOEING - DOUGLAS	27
5914296-5503	VALVE, STEERING	* BOEING - DOUGLAS	32
5914296-5505	VALVE, STEERING	* BOEING - DOUGLAS	32
5914296-5507	VALVE, STEERING	* BOEING - DOUGLAS	32
5914296-5509	VALVE, STEERING	* BOEING - DOUGLAS	32
5914387-505	ACTUATOR	* BOEING - DOUGLAS	27
5914387-507	ACTUATOR	* BOEING - DOUGLAS	27
5914387-509	ACTUATOR	* BOEING - DOUGLAS	27
5914387-511	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-513	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-515	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-517	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-519	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27



## DC9 Component Support Capabilities

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
5914387-521	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-523	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5914387-525	LIMITER, RUDDER THROW	* BOEING - DOUGLAS	27
5918125-1	DAMPER, ELEVATOR	* BOEING - DOUGLAS	27
5918125-501	DAMPER, ELEVATOR	* BOEING - DOUGLAS	27
5918160-5501	ACTUATOR	* BOEING - DOUGLAS	27
5918160-5503	ACTUATOR	* BOEING - DOUGLAS	27
5918160-5505	ACTUATOR	* BOEING - DOUGLAS	27
5918161-5503	VALVE	* BOEING - DOUGLAS	27
5918161-5505	VALVE	* BOEING - DOUGLAS	27
5924225-1	GEARBOX	* BOEING - DOUGLAS	27
5924225-1A	GEARBOX	* BOEING - DOUGLAS	27
5924593	ACTUATOR	* BOEING - DOUGLAS	32
5924593-5001	ACTUATOR	* BOEING - DOUGLAS	32
5924593-5501	ACTUATOR	* BOEING - DOUGLAS	32
5936965-5001	ACTUATOR	* BOEING - DOUGLAS	27
5936965-5501	ACTUATOR	* BOEING - DOUGLAS	27
5936965-5503	ACTUATOR	* BOEING - DOUGLAS	27
5937036-5001	ACTUATOR, MLG	* BOEING - DOUGLAS	32
5937036-5501	ACTUATOR, MLG	* BOEING - DOUGLAS	32
5937036-5503	ACTUATOR, MLG	* BOEING - DOUGLAS	32
5937036-5505	ACTUATOR, MLG	* BOEING - DOUGLAS	32
5937036-5507	ACTUATOR, MLG	* BOEING - DOUGLAS	32
5937052-5001	ACTUATOR	* BOEING - DOUGLAS	27
5939074-5001	ACTUATOR, NLG DOOR	* BOEING - DOUGLAS	32
5939074-5501	ACTUATOR, NLG DOOR	* BOEING - DOUGLAS	32
5940560-1	ACTUATOR, CONTROL STABILIZER	* BOEING - DOUGLAS	27
5940560-501	ACTUATOR, CONTROL STABILIZER	* BOEING - DOUGLAS	27
5956101-5501	VALVE	* BOEING - DOUGLAS	32
738257-8	BRUSH, BLOCK	HAM-STD	61
976J252-3	GENERATOR, AC	HAM-STD	24



**DC9 Component Support Capabilities**

Derco Repair Services, Inc.  
 8065 West Fairlane Avenue Milwaukee, WI 53223 USA  
 tel: (414) 355-7770; fax: (414) 355-2648  
 repair@dercoaerospace.com

PART NUMBER	DESCRIPTION	MANUFACTURER	ATA
976J252-6	GENERATOR, AC	HAM-STD	24
976J252-7	GENERATOR, AC	HAM-STD	24
976J252-8	GENERATOR, AC	HAM-STD	24
AS-19593	PUMP, HYDRAULIC	VICKERS	29
AS-19593-A	PUMP, HYDRAULIC	VICKERS	29
AS-19593-B	PUMP, HYDRAULIC	VICKERS	29
AS-19593-C	PUMP, HYDRAULIC	VICKERS	29
AS-19593C	PUMP, HYDRAULIC	VICKERS	29
AV16A1275B	VALVE, FUEL, SHUTOFF	ITT AEROSPACE	28
AV16B1330D	VALVE, FUEL, SHUTOFF	ITT AEROSPACE	28
AV16B1736D	VALVE, FUEL, SHUTOFF	ITT AEROSPACE	28